

CANARY AUDIO®

Vacuum Tube Compact Disc Player

*Handcrafted in California*

CD-200

OWNER'S MANUAL

MADE IN USA

## Dear Customer:

Please allow us to take this opportunity to thank you for purchasing this CANARY AUDIO product.

We strongly recommend that you carefully study the Safety Instructions before attempting to operate the unit.

After you have finished reading the instructions, please save this manual for future reference.

 
### **WARNING:**

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THE UNIT TO RAIN OR MOISTURE.


### **CAUTION:**

TO PREVENT ELECTRIC SHOCK, DO NOT USE THIS POLARIZED AC PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL ONLY.

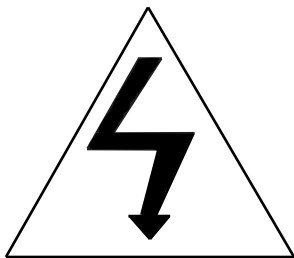

 The lightning flash with arrowhead symbol is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

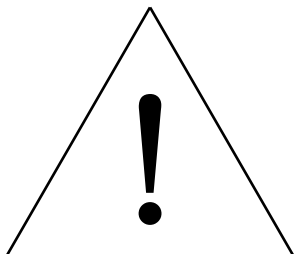

This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the unit.

# **SAFETY INSTRUCTIONS**

## **Power Source:**

- The unit should be connected to an AC power source of the proper rated voltage.
- Never replace the power supply's line fuse with the one of incorrect characteristics.

## **AC Cord Protection:**

- Do not defeat the grounding or polarization feature of the AC cord.
- Make sure that the AC receptacle holds the AC cord plug firmly and securely.
- Keep the AC cord away from heating appliances.
- Never put heavy object on the AC cord.
- If smoke, malodors or noises are emitted from the unit, turn the power off and disconnect the AC cord.

## **Keep Away from Water and Moisture:**

- This unit should not be used near water.
- Keep the unit away from flower vases, bathtubs, washbowls, kitchen sinks, laundry tubs, swimming pools, etc. If liquids are spilled into the unit, serious damage could occur.

## **Ventilation:**

- Slots and openings in the chassis and in the back or bottom are provided for necessary ventilation.
- Do not place a cloth on top of the unit or block the provided ventilation slots and openings in any other way.
- Do not place the unit on a bed, sofa, rug or other similar surface which may block the slots and openings.
- Do not place the unit in a confined space, such as a bookcase or built-in cabinet, unless proper ventilation is provided.

## **Non-Use Periods:**

- When left unused for a long period of time, the unit should be unplugged from the AC outlet.

# **PROPER CARE**

## **Break-in Period:**

- As with most audio components, the CD-200 requires a “break-in” period. During this period the internal components will stabilize and reach their normal operating parameters. There are no special procedures required for this break-in period, just listening to your favorite music will accomplish this task all by itself.
- The time required to break in the CD-200 is approximately 30 to 50 hours. Upon completion of the break-in period you will hear an improvement in the overall sound quality of the compact disc player.

## **Stacking:**

- Place the unit in a horizontal position, and do not place anything heavy on it.
- Do not place the unit on any other equipment which may become hot.

## **No Fingers or Other Foreign Objects:**

- Touching internal parts of this unit is dangerous and may cause serious damage to the unit. Do not attempt to disassemble the unit.
- Do not put any foreign object into the unit through the ventilation slots and openings.

## **Cleaning:**

- A regular dusting with a soft, non-abrasive cloth will generally keep the finish of the faceplate and chassis looking like new.

## **Packing Materials:**

- The original packing materials and shipping boxes are custom designed to prevent shipping damage from occurring.
- We recommend that you retain all of the packing materials and shipping boxes for future transport of your CD-200. Shipping the CD-200 in anything other than its original packing boxes or packing materials may result in damage that is not covered by warranty.

## **Registration Card:**

- To ensure that your CD-200 is registered, please spend a moment now to complete and return the Registration Card.
- Save a copy of the Registration Card and the bill of sale as proof of purchase for future reference.

# **UNPACKING**

- Open the shipping boxes.
- Remove the accessories that come with the unit.
- Grasp the underside of the CD player and lift it straight out of the box.
- Place the preamplifier in a safe location. Remove the packing foam and the protective plastic wrapping.
- After unpacking the CD-200, inspect it for any shipping damage and contact us immediately if any is found. Do not plug the power supply into any outlet if you find any shipping damage.
- Please keep all packing materials for future transport of your player. Shipping the CD-200 in anything other than its original boxes may result in damage that is not covered by warranty.

# **ACCESSORIES**

**The following items are included in the package aside from the main unit:**

- Owner's manual
- Warranty card
- AC power cord
- Remote control
- (2) AAA batteries (already installed in the remote control)

The batteries have been installed in the remote control prior shipping. To install or replace the batteries:

- Remove the remote control back plate by loosens the screws.
- Install the new batteries, following the battery position diagram on the plastic battery receptacle.
- Replace and secure the back plate.

 
# **PLACEMENT**

- Do not place the unit near a heating device or in a location where it is exposed to direct sunlight.
- Do not place the unit in an excessively humid or dusty location.
- Avoid placing the unit in the areas of vibration, impact or where the surface is tilted as the internal parts may be seriously damaged.
- Avoid placing the unit next to kitchen counters or other locations where it is subjected to oily fumes.
- Place the unit in a horizontal position, and do not place anything heavy on it.
- Do not place the unit on any other equipment which may become hot.

## **CONNECTION STEPS:**

1. Place the CD-200 in a rack or on a shelf. The CD-200 does not require a special rack or cabinet for installation.
2. Neatly arrange and organize wiring to and from the preamplifier and all components. Separate the AC wires from any audio cables to prevent hum or other unwanted noise from being introduced into the system.
3. Turn off any associated components prior to connecting the CD-200. This minimizes the chance of momentary electrical surges disturbing your system.
4. Connect the analog or digital outputs from the back of the CD-200 to the inputs of your preamplifier or integrated amplifier.
5. With the power switch in the OFF position, attach the power cord to the CD-200 and connect it to your AC outlet.
6. Press the power button on the CD-200 to switch on the unit. The CD-200 will take approximately 60 seconds to initialize before you will hear any sound.
7. Power on the rest of your system.
8. Insert a disc into the CD-200 and press the PLAY button.

# FRONT PANEL CONTROLS

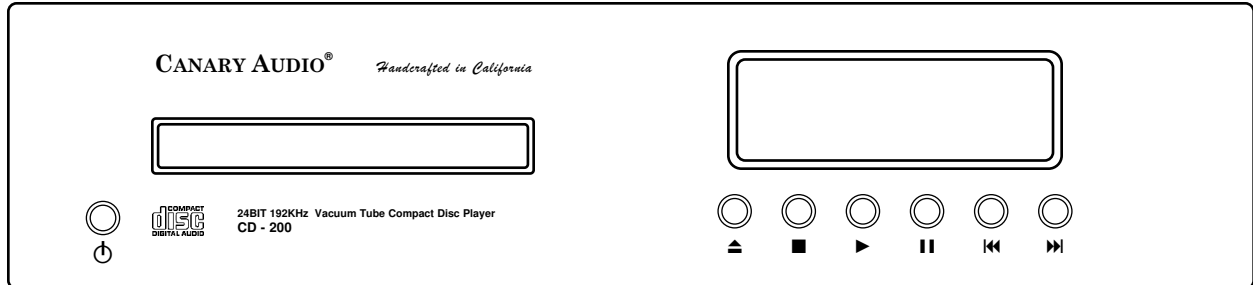

Pressing this button will turn ON or OFF the cd player. The CD-200 will take about 60 seconds to initialize each time when first turned ON.



Pressing this button will open or close the cd drawer.



Pressing this button will stop playback.



Pressing this button will initiate playback.



Pressing this button once will pause the playback. A second press will resume the playback.




Pressing this button successively will back up one track with each press. Pressing and holding this button will perform a fast backward scan during playback.




Pressing this button successively will advance one track with each press. Pressing and holding this button will perform a fast forward scan during playback.

# REAR PANEL CONNECTIONS

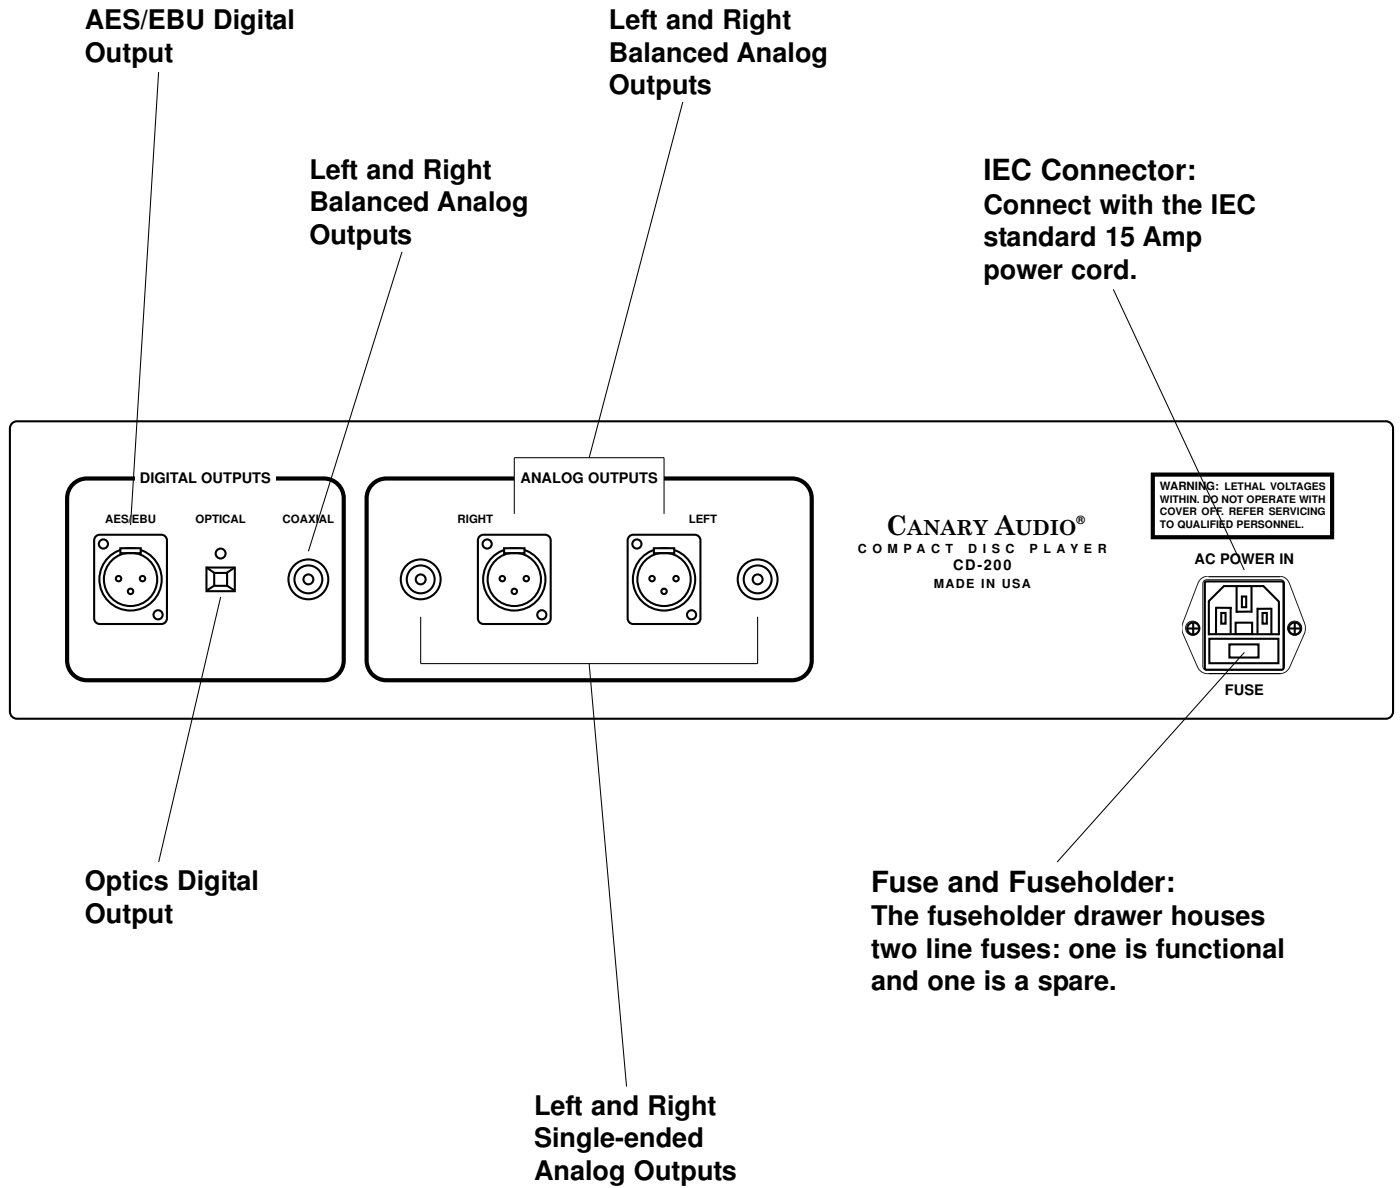 

# REMOTE CONTROL

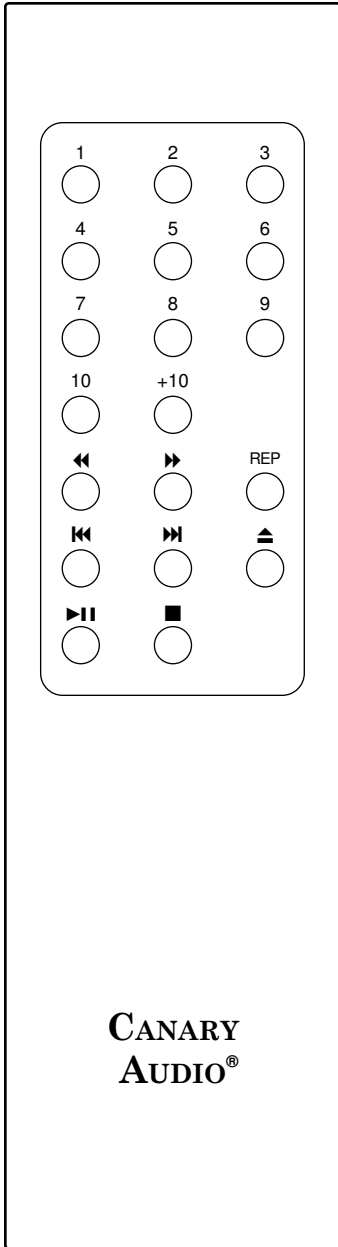 

- |     |     |   |  |
|-----|-----|---|--|
| 1   | 2   | 3 |  |
| 4   | 5   | 6 | Direct number access buttons to initiate playback for specific track.  |
| 7   | 8   | 9 |  |
| 10  | +10 |   |  |
| ◀◀  |     |   | Pressing and holding this button will perform a fast backward scan during playback.  |
| ▶▶  |     |   | Pressing and holding this button will perform a fast forward scan during playback.   |
| REP |     |   | Pressing this button once will enter track repeat mode. A second press will enter disc repeat mode. A third press will exit repeat mode. |
| ⏮   |     |   | Pressing this button successively will back up one track with each press.  |
| ⏪   |     |   | Pressing this button successively will back up one track with each press.  |
| ⏩   |     |   | Pressing this button successively will advance one track with each press.  |
| ⏭   |     |   | Pressing this button will open or close the cd drawer.   |
| ▶ / |     |   | Pressing this button will initiate playback. In play mode, this button will toggle between play and pause.                               |
| ■   |     |   | Pressing this button will stop playback.   |

## Using the Remote Control Unit:

The infrared remote sensor is located behind the display on the front of the CD player. Point the remote control unit at the remote sensor when operating it.

The remote control unit will operate from the remote sensor in a direct distance of approximately 6 meters, but this distance will be shortened if obstacles are present or if operated at an angle greater than 30 degree in either direction.

# SPECIFICATIONS

Model:	CD-200
Frequency Response:	+/- 1 dB from 20 Hz to 20,000 Hz
Distortion:	< 0.005%
Signal-to-Noise Ratio:	> 118dB
Dynamic Range:	> 116dB
Channel Separation:	> 85dB (1KHz)
Sampling Frequency:	44.1KHz
Line Output Voltage:	2.0 Volts
Power Consumption:	30 Watts
Tube Complement:	2-6922
Dimensions:	19" W x 16.5" D x 4.75" H
Weight:	50 lbs.

**Note:**

Specifications are subject to change without notice. Weight and dimensions are approximate.

# **LIMITED WARRANTY**

Canary Audio warrants to the original purchaser that CD-200 compact disc player is free of manufacturing defects for a period of three (3) years from the date of purchase, with the exception of the transport mechanism and laser head. Transport mechanism and laser head are covered for one (1) year. To receive this warranty, the original purchaser must complete the enclosed Warranty Registration Card and mail it to Canary Audio within thirty (30) days from the date of purchase. Canary Audio will then validate the warranty to the original purchaser.

This warranty does not cover cosmetic damage or damage due to acts of God, accident, misuse, abuse or negligence. This warranty does not cover damage due to improper operation or maintenance, use with incompatible accessory, connection to improper voltage supply, or attempted repair, modify or upgrade by anyone other than Canary Audio or a facility authorized by Canary Audio. This warranty does not cover any damages to the vacuum tubes and does not cover normal maintenance.

Canary Audio shall not be responsible in any way for consequential or indirect damages or liabilities resulting from the use and operation of the product covered herein or resulting from any breach of this warranty or any implied warranty relating to said product. Under no circumstances does Canary Audio assume liability or responsibility for injury or damages sustained in the use or operation of this equipment or for damages to any other equipment connected to it.

During this stated period, Canary Audio will repair or replace any defective components free of charge. A Return Authorization Number (RA Number) is required before any product is returned to our factory for any reason. This number must be visible on the exterior of the shipping container(s).

Units to be repaired by Canary Audio must be sent shipping and insurance prepaid by the original purchaser in the original packing material. Canary Audio will accept no responsibility for any damage occurring to the unit that is shipped in packing material other than the original packing material. A written description of the defect and a copy of the original bill of sale should be accompanied with the returned product.

This warranty applies only to the first end-user purchaser of a CD-200 compact disc player that is purchased and used in the United States of America and is not valid for subsequent purchasers. All other warranties or conditions either written or implied are void.

## **Canary Audio**

P.O. Box 6216, Rosemead, CA 91770, USA

Telephone: (626)500-6261

[Http://www.canaryaudio.com](http://www.canaryaudio.com)